

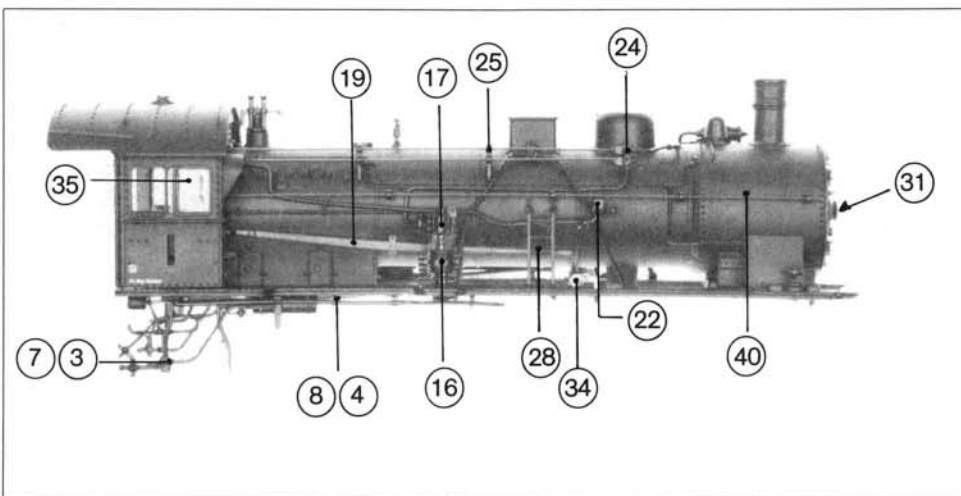


# Original ROCO-Ersatzteile Original ROCO Replacement Parts

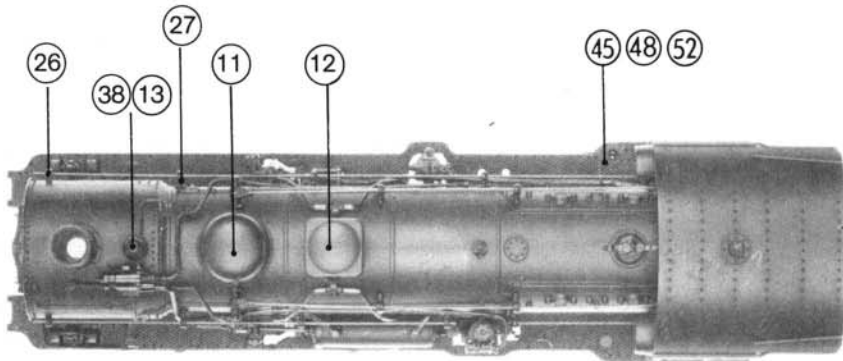

4815  
473006  
5204

43233  
43234  
43236

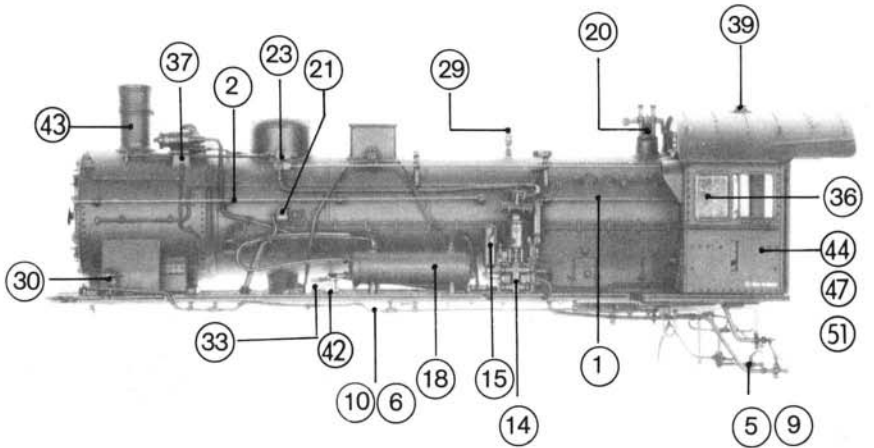

Kessel kpl. 46 49 50

Satz Kesselrohre (o. Abb.) 32

Pos. Nr.	Art.-Nr. neu	Art.-Nr. alt	Text	Preis-gruppe
1	91994	4115S-503	Achse 0,4x24 mm Axle 0,4x24 mm	2
2	91996	4115S-505	Achse 0,4x67 mm Axle 0,4x67 mm	2
3	92012	4116A-038	Steckteil 1 rechts, rot Push-in part 1 right, red	4
4	92013	4116A-039	Steckteil 2 rechts, rot Push-in part 2 right, red	4
5	92014	4116A-040	Steckteil 1 links, rot Push-in part 1 left, red	4
6	92015	4116A-041	Steckteil 2 links, rot Push-in part 2 left, red	4
7	92045	4116D-038	Steckteil 1 rechts, schwarz Push-in part 1 right, black	4
8	92046	4116D-039	Steckteil 2 rechts, schwarz Push-in part 2 right, black	4
9	92047	4116D-040	Steckteil 1 links, schwarz Push-in part 1 left, black	4
10	92048	4116D-041	Steckteil 2 links, schwarz Push-in part 2 left, black	4
11	92074	4116S-008	Domdeckel Dome-cover	3
12	92075	4116S-009	Sanddomdeckel Sanddome cover	3
13	92076	4116S-010	Glocke Bell	3
14	92077	4116S-011	Luftdruckpumpe Air pump	4
15	92078	4116S-012	Pumpensteckteil links Push-in part for air pump left	2
16	92079	4116S-013	Wasserspispepumpe Water pump	4
17	92080	4116S-014	Pumpensteckteil rechts Push-in part, water pump right	2
18	92081	4116S-015	Vorwärmer Preheater	3
19	92083	4116S-017	Schieberverstellhebel Slide lever	3
20	92087	4116S-024	Sicherheitsventil Safety-valve	3
21	92098	4116S-059	Ventil links Valve-left	3
22	92099	4116S-060	Ventil rechts Valve-right	3
23	92100	4116S-062	Schaltachsenlager links Switch rod bearing left	3
24	92101	4116S-063	Schaltachsenlager rechts Switch rod bearing right	3
25	92102	4116S-064	Schaltachsenlager doppelt Switch rod bearing double	2
26	92103	4116S-065	Griffstangenhalter kurz Handrail-holder short	2
27	92104	4116S-066	Griffstangenhalter lang Handrail-holder long	2
28	92105	4116S-067	Kesselleiter boiler-ladder	3
29	92106	4116S-068	Lokpfeife Loco whistle	3
30	92107	4116S-069	Steckteil 5 Push-in part 5	2
31	92108	4116S-070	Handrad Handwheel	3
32	92112	4116S-094	Kesselrohre Satz Boiler pipes-set	25
33	92113	4116S-112	Schwingenhebel links Regulator lever left	3
34	92114	4116S-113	Schwingenhebel rechts Regulator lever right	3
35	92119	4116S-119	Fenster links Window left	3
36	92123	4116S-128	Fenster rechts Window right	3
37	92124	4116S-150	Generatorstoppel Generatorplug	1
38	92125	4116S-151	Glockenstoppel Bell plug	1
39	92127	4116S-153	Stoppel für Antenne Antenna plug	2
40	92134	4116S-500	Achse 0,4x94 mm Axle 0,4x94 mm	2
41	92136	4116S-502	Achse 0,4x64,5 mm Axle 0,4x64,5 mm	2
42	92137	4116S-503	Achse 0,8x27 mm Axle 0,4x27 mm	2
43	92143	4117D-022	Rauchfang Chimney	3
44	92151	4117F-001	Führerhaus für 43233 Drivers cab for 43233	30
45	92153	4117F-201	Umlaufblech für 43233 Running board for 43233	30
46	92158	4117F-A85	Kessel kpl. für 43233 Boiler assembly for 43233	73
47	92159	4117G-001	Führerhaus für 43234 Drivers cab for 43234	30
48	92161	4117G-201	Umlaufblech für 43234 Running board for 43234	30
49	92166	4117G-A85	Kessel kpl. für 43234 Boiler assembly for 43234	73
50	94611	—	Kessel kpl. für 43236 Boiler assembly for 43236	73
51	94612	—	Führerhaus für 43236 Drivers cab for 43236	30
52	94613	—	Umlaufblech für 43236 Running board for 43236	30